



ACCESSORIES


















Fit-up aid – Sensor Bracket - Coverage

Grip holder with sensor quiver Part-No. 4811 082		Sensor float Part-No. 8289 086	
Protection cover Part-No. 8910 102		Sensor basket Part-No. 4811 070	
Mounting rail Part-No. 8289 048		Twin sensor basket Part-No. 4811 081	
Rope 11 m Part-No. 89 10 103		telescopic rod 2,30m 6250 728 3,20m 6250 729 Logger-bracket 3491 007	

GSM-Modem – Voltage Supply - Battery

Power supply housing stationary Part-No.	 	Battery 9 Ah Part-No. 5450 30	 
Battery case 2 Ah Part-No.	 	Battery 2 Ah Part-No.	 
Cable antenna GSM / GPRS Part-No. 8900 102		Charger Part-No. 5450 029	
Magnetic base antenna Part-No. 5415 018		GSM-Modem Part-No. 5415 029	 

Connection wires / adapters

<p>7-pol basic – extension cable plug / socket 1,20 m Part-No. 5415 076</p>		<p>Extension cable 3m Mlog / ISM[®] Part-No. 5415 034</p>	
<p>7-pol basic – extension cable plug / socket 3,50 m Part-No. 5415 077</p>		<p>Extension cable 7 m Mlog / ISM[®] Part-No. 5415 034-7</p>	
<p>Distributor-box IN: 1 x 7-pole OUT 1 x 4-20mA 2 x ISM[®]- Part-No. 5415 074</p>		<p>Mlog Y-cable for 2 x ISM[®]--sensors direkt am Mlog 1,20 m Part-No. 5415 078</p>	
<p>Configuration cable Mlog – PC (RS232) 1,20 m Part-No. 5415 038</p>		<p>Extension cable for ISM[®]-sensor 3 m Part-No. 5415 037</p>	
<p>Mlog mA-cable 1,20m Part-No. 5415 070</p>		<p>Extension cable for ISM[®]-sensor 5 m Part-No. 5415 035</p>	
<p>Mlog mA- cable open end Part-No. 5415 071</p>		<p>Extension cable ISM[®]-sensor 7 m Part-No. 5415 036</p>	
<p>Set-suitcase black Part-No. 54 15 030</p>		<p>RS232 / USB adapter Part-No. 54 15 039</p>	
<p>Mlog – Modem 30 cm Part-No. 54 15 075</p>		<p>Bluetooth dongle Part-No. 5415 046</p>	



Presented by:

